
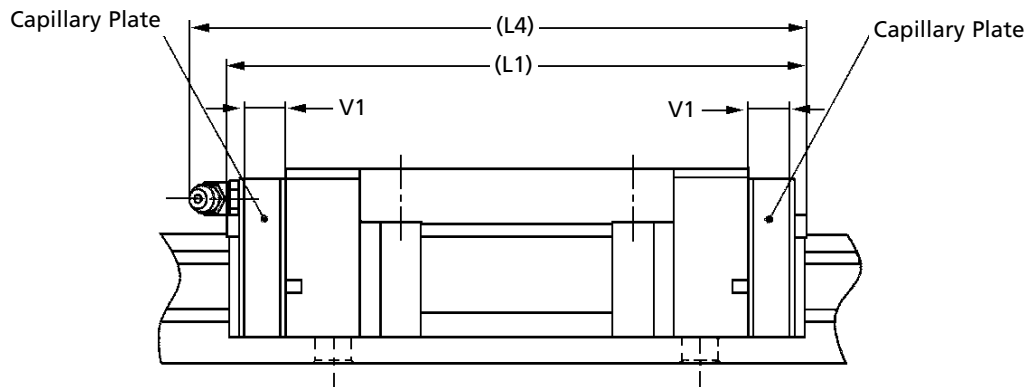


LRX-Q

LINEAR MOTION

Linear Roller Way Capillary Plates

Oil Impregnated Plastic Parts

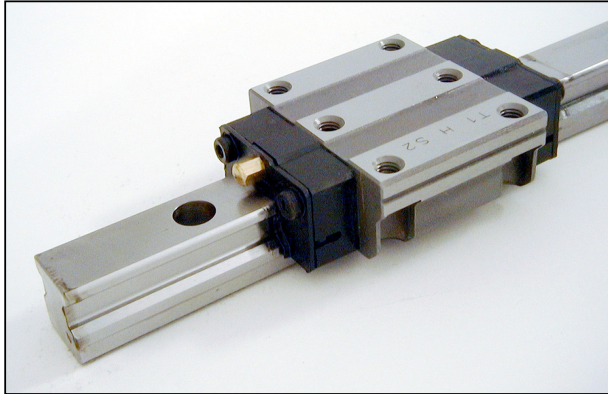

Part Number	V1	L1	L4	Price Each
LRX15-Q	5.6	79	80	£16.71
LRX20-Q	5.6	97	106	£18.52
LRX25-Q	5.6	110	118	£20.41
LRX30-Q	5.6	124	136	£22.49
LRX35-Q	5.6	135	-	£24.36
LRX45-Q	6.5	167	-	£28.05
LRX55-Q	6.5	197	-	£30.15
LRX65-Q	9.5	264	-	£34.77

Material

Oil impregnated plastic.

Extras

Optional extras on LRX Series fitted at time of ordering complete unit. See preceding pages.

+44 (0)1246 455500
 +44 (0)1246 455522

ondrives

sales@ondrives.com
 www.ondrives.com

Product information updated 1st April 2011 and subject to change. Please contact Sales for the latest prices and availability.

LINEAR MOTION

Linear Roller Way Capillary Plates

CHANGE OF OIL AMOUNT AT HIGH TEMPERATURE

Loss of oil amount of **Capillary Plate** at high temperatures was checked. **Capillary Plate** was left at the temperature of 20°C, 50°C and 80°C respectively, and weighed before and after the test.

The results of tests showed that oil loss amount of **Capillary Plate** was very small under all test temperature conditions.

TEST CONDITIONS AND RESULTS

Test piece: **Capillary Plate** for LWH25B

Test equipment: Thermostatic chamber

Test duration: 790 hours (about 33 days)

Temperature	20°C	50°C	80°C
Loss Amount	0 mg	Under 1 mg	Under 3.5 mg
Oil Loss Ratio	0%	0.1%	0.3%

SPECIFICATION AND APPLICABLE LINEAR (ROLLER) WAY SERIES

Capillary Plate is applicable to Linear Way and Linear Roller Way series shown in the following table. Attach the code Q to the end of part number and Linear (Roller) Way with prepacked grease and **Capillary Plates** (inside of end seals) will be delivered. The Specification of **Capillary Plate** with no prepacked grease is also applicable. If required please consult our technical department.

Please note that **Capillary Plate** can be delivered only as assembled in Linear (Roller) Way.

APPLICABLE LINEAR (ROLLER) WAY

Applicable Series		Applicable Part No. ¹	Prepacked Grease
Ball Type	Linear Way H	LWH15B - LWH65B	Lithium Soap Base Grease
	Stainless Linear Way H	LWHS15SL - LWHS30SL	
	Linear Way E	LWE15 - LWE45	
	Stainless Linear Way E	LWES15SL - LWES30SL	
Roller Type	Linear Roller Way Super X	LRX15 - LRX65	

Note (1) Only representative types are shown in the table, but applicable to all slide units.

CAUTION FOR USE

- NEVER wash **Capillary Plate** with organic solvent and/or white kerosene which have the ability of removing fat, nor leave them in contact with the above agents.
- It is recommended that **Capillary Plate** is used together with lithium soap base grease.
- Maximum allowable temperature is 80°C.